



**Oz I Hook**




**Oz Y Hook**

## Installation Guide



safehook™

# Installation Guide

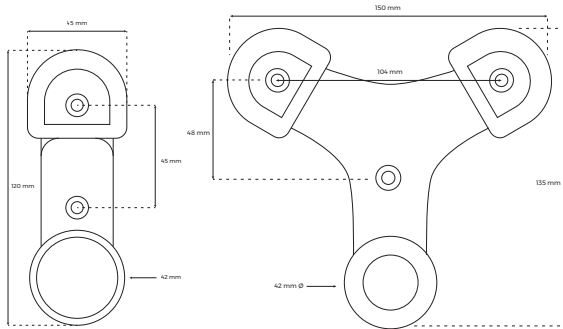

## Layout recommendations

- 300mm centres first hook in each row starting 150mm in from an edge.
- Hooks can be installed onto most substrates however we recommend that hooks be fixed to a timber batten that is securely fitted to a wall.
- The minimum suggested thickness of the timber batten is 35mm.
- I and Y hooks are supplied with 12-gauge stainless steel wood screws that require a minimum 35mm thick substrate. The 2 ½ inch screws are used to fix the button to the body to the wall the 2-inch screws are used to fit the body of the hook to the wall.
- Note where supplied screws are provided without painted heads.
- We suggest hooks be fitted no less than 700mm from the floor, allow 500mm height for each additional row.
- The same layout rules apply to Euro hooks, this product however is not supplied with fixings and is suited for installation using no greater than 10-gauge timber screws.
- Care should be taken to ensure that hooks are secured correctly and are not damaged in the process of installation.